



NOTES: LED1: TRANSMIT (BRIGHT) OR RECEIVE MODE
 LED2: POWER
 RTS SIGNAL SELECTS TX/RX MODE

<h1>AQUATICUS ROV</h1>	
TITLE: RS485 to RS232 Converter	
Document Number: http://aquaticus.info/rs485_to_rs232	REV: A
Date: 2006-12-06 21:59:02	Sheet: 1/1